


## $-\!-\!-$ INSTRUCTION MANUAL $-\!-\!-$

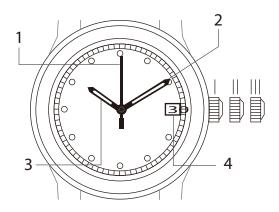

## According to model

Display and functions

- 1 Second Hand
- 2 Minute Hand
- 3 Hour Hand
- 4 Date\*

## **SETTINGS**

## Setting the time

Pull the crown out to position III and turn it clockwise or counterclockwise to set the desired time. On some models with a second hand, you can synchronize it with an official time signal (Radio/TV /Internet). When the crown is pulled out in position III, the seconds hand is stopped (Quartz movement only). As soon as the time setting has been synchronized, push the crown back down into position I.

# Fast correction of the date

### Window calendar

Pull the crown out to position II and turn it clockwise until the correct date is displayed. During this operation, your watch will continue to function normally.

## Other functions settings

Please contact our distributor or agent.